

0481 Safety Glow Inside Release Handle 0482 Hi-Temp Inside Release Push Handle 0487 Frost-Free Inside Release Push Handle

1. Drill a 3/4" diameter (19.1mm) hole through the door from the warm side at the location of latch inside release hole. Hole must be square to door surface for proper alignment and operation. For rods using a cross pin, drill a 1" diameter (25.4 mm) x 2" deep pocket from the cold side to accommodate pin and washers.
2. Mount to the door using (3) #10 (5.0mm) round head screws.
For Freezers, fill warm side of cavity with low temperature grease to limit air infiltration and ice formation through hole.
3. Test to assure latch release function.
WARNING: Function is critical. Entrapment in freezer can cause severe injury or death.

Fig. 1

