


BCP19017 BOLT ON LOCKBOX INSTALLATION



bloxwich
TRUCK & CONTAINER

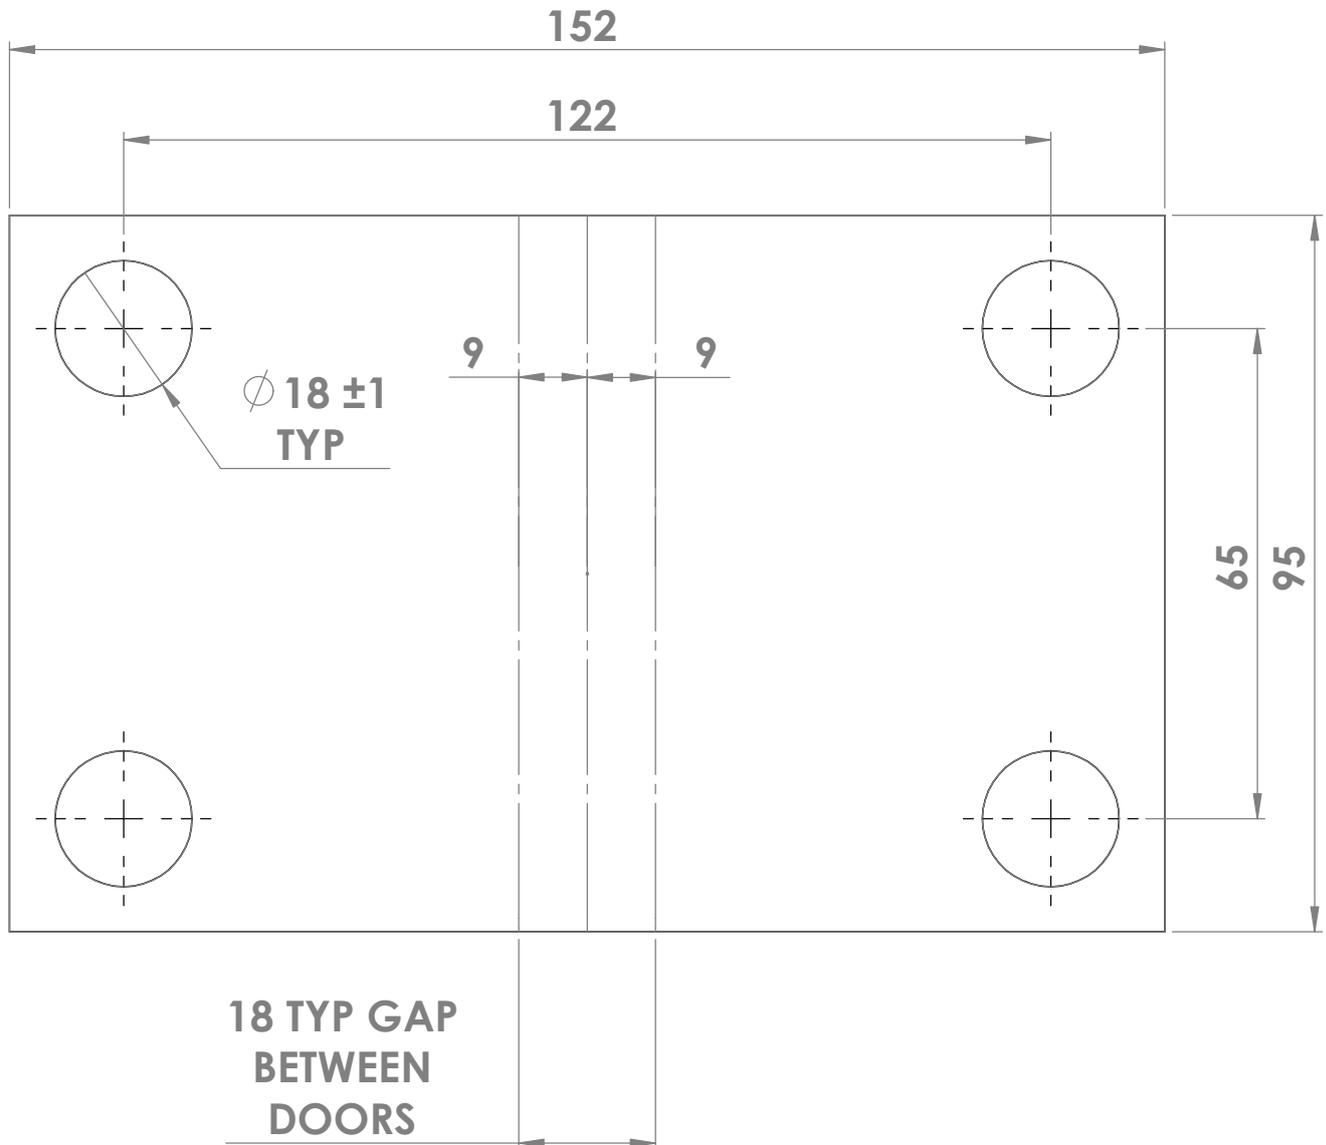

INSTALLATION

- 1) Drill four $\phi 18\text{mm} \pm 1\text{mm}$ holes through the RHS of the door verticals (2 in each door) using the template provided/downloaded and printed. Use of a suitable step bit is recommended.
- 2) Fit both halves of the lockbox through the doors, fit the washers and nylocs nuts and loosely tighten.
- 3) Check operation of the RH door and adjust as required. Fully tighten nuts or torque to 248Nm

NOTES

Ensure this template is printed 1:1